


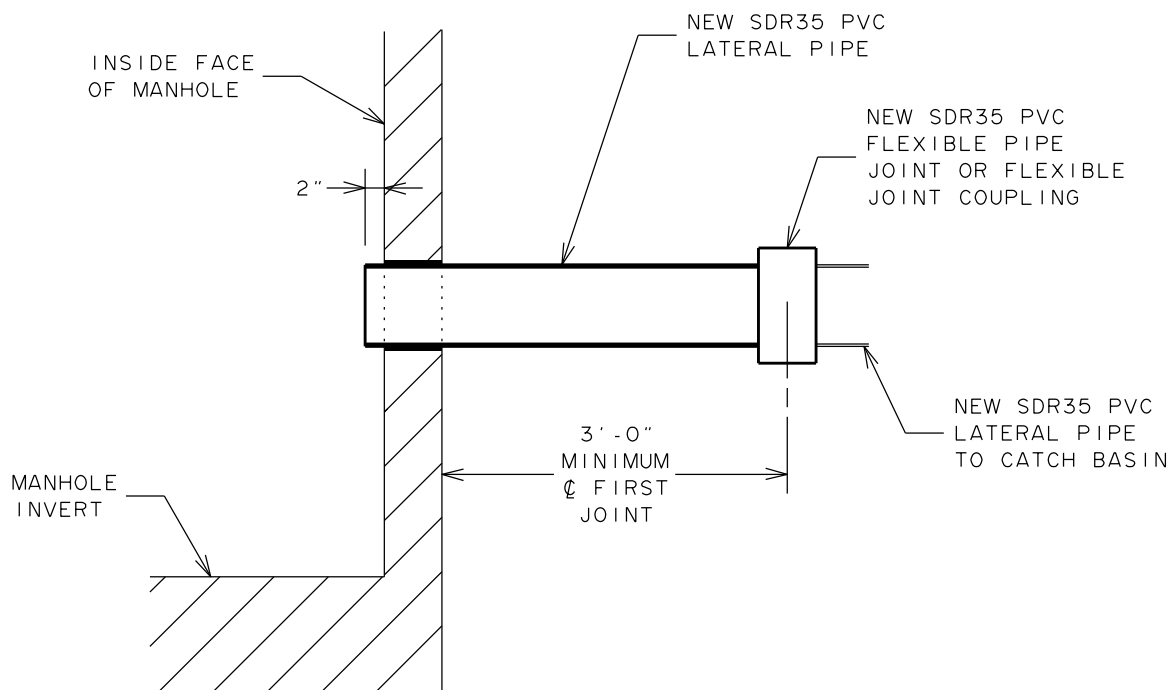

NOTES:

1. REMOVE EXISTING LATERAL CONNECTION, AND IF NECESSARY ENLARGE EXISTING OPENING IN MANHOLE BY CORING TO ACCOMMODATE NEW LATERAL CONNECTION.
2. CLEAN OPENING ALL AROUND, REMOVING ALL LOOSE MATERIALS.
3. INSERT NEW LATERAL THRU MANHOLE OPENING AND MAKE CONNECTION WATERTIGHT. SEAL ANY VOID BETWEEN OPENING AND LATERAL CONNECTION WITH EPOXY MORTAR, SIKADUR 33 OR FLEXOLITH GEL.

CITY OF ROCHESTER

LATERAL CONNECTION TO SEWER MANHOLE - EXISTING OPENING

ISSUED 10-18-02

REVISED 7-31-12

NON-STANDARD
DWG.NO.S60I-II